

Product Label - Prehung Doors

JT WINDOWS

IMPORTANT – PLEASE READ PRIOR TO INSTALLATION

BEFORE PRODUCT INSTALLATION

- CHECK FOR CORRECT SIZE.
- CHECK FOR ANY FLAWS IN MATERIAL OR QUALITY OF WORKMANSHIP. IF ANY PROBLEMS ARISE, **DO NOT INSTALL OR PREFINISH. CALL AND RETURN PRODUCT TO SUPPLIER.**
- FAILURE TO DO SO WILL VOID ANY RETURN OR EXCHANGE.
- **INSTALLING OR PREFINISHING UNIT IMPLIES ACCEPTANCE.**

FINISHING

- HANDLE WITH CARE AT ALL TIMES. DO NOT EXPOSE TO WEATHER OR EXTREME TEMPERATURES PRIOR TO FINISHING.
- REMOVE EXCESS GLAZING MATERIAL WITH A SHARP PUTTY OR X-ACTO KNIFE.
- PRIME AND PAINT **ALL 6 SURFACES** WITH A MINIMUM OF AT LEAST 2 COATINGS EACH.
- BE SURE TO OVERLAP PAINT 1/16" ONTO GLASS – REFER TO ***JT FINISHING INSTRUCTIONS*** SHEET.

CAUTION: PRIMER IS NOT A FINISH COAT AND WILL NOT STAND UP TO WEATHER. IT IS PART OF THE PREPARATION PROCESS FOR FINISH COATING.

- **STAINS AND CLEAR FINISHES, AND DARK COLORS, ARE NOT RECOMMENDED FOR EXTERIOR USAGE AS THEY WEATHER RAPIDLY AND PROVIDE POOR WOOD PROTECTION.**
- **BOTTOM OF SILL MUST BE FINISHED WITH MINIMUM 2 COATS PRIMER AND 2 COATS EXTERIOR GRADE FINISH.**
- **MOISTURE BARRIER MUST BE APPLIED BETWEEN SILL AND FINISHED FLOOR PRIOR TO INSTALLATION.**

CAUTION: USE EXTERIOR PAINTS FOR EXTERIOR PAINTING ONLY. PAINT MUST OVERLAP PUTTY OR WOOD STOP 1/16" ON TO GLASS TO FORM A PROPER SEAL AGAINST MOISTURE. DO NOT PAINT WEATHER STRIPPING.

WE DO NOT TAKE RESPONSIBILITY FOR THE STAINABILITY OF ANY PRODUCT YOU MAY PURCHASE.

AT JT WINDOWS INC. EXTREME CARE IS TAKEN IN PRODUCING HIGH QUALITY, WEATHER TIGHT UNITS. ALL EXTERIOR JOINTS ARE TIGHTLY FIT AND FILLED AS NECESSARY TO ASSURE WEATHERABILITY. SINCE ALL PREHUNG DOORS LEAVE OUR FACTORY UNFINISHED, AND THE FINAL WEATHER COATINGS (FINISHING) ULTIMATELY REST IN THE HANDS OF OUR CUSTOMERS, **IT IS IMPOSSIBLE FOR THE FACTORY TO WARRANT AGAINST LEAKAGE.**

WE SUGGEST: AFTER THE FIRST 3-12 MONTHS INSPECT ALL DOOR JOINTS FOR CRACKS OR SEPARATION IN FINISH. IF ANY ARE FOUND, LIGHTLY SAND AND FILL WITH CAULKING, THEN REPAINT.

WWW.JTWINDOWS.COM

PREHUNG DOOR INSTALLATION INSTRUCTIONS

****NOTE: DO NOT INSTALL DOOR FRAME PERMANENTLY WITHOUT DOOR PANEL(S) ON HINGES.****

YOUR JT PREHUNG DOOR MAY BE INSTALLED IN BOTH NEW AND EXISTING CONSTRUCTION. INSTALL PREHUNG FRAME DIRECTLY TO STUDS. IN EXISTING CONSTRUCTION, BREAK BACK STUCCO OR SIDING 4" - 6" (OR FARTHER IF NECESSARY) TO TIE INTO EXISTING FLASHING PAPER.


INSTALL DIRECTLY TO THE STUDS (FOLLOW AS NECESSARY)

- 1) TO ASSURE PROPER OPERATION OF THIS PRODUCT BE SURE THAT THE OPENING IS SQUARE.
- 2) FIRST, TACK DOOR FRAME INTO OPENING WITHOUT DOOR(S) ON HINGES (SEE "A"). DO NOT SECURE PERMANENTLY UNTIL STEP 6.
- 3) NEXT, INSTALL DOOR PANEL(S) ONTO HINGES (SEE "B").
- 4) SHIM FRAME (BETWEEN FRAME AND HEADER/TRIMMER STUDS) AND SILL AS NECESSARY TO ACHIEVE CONSISTANT REVEALS/GAPS BETWEEN DOOR FRAME AND DOOR PANEL(S) – (SEE "C").

NOTE: WE STRIVE TO ACHIEVE A CONSISTANT 1/8" REVEAL/GAP VERTICALLY AND TOP HORIZONTALLY WHEN WE PREHANG YOUR PREHUNG DOOR AT OUR FACTORY. (SEE "C")

- 5) CHECK ENTIRE UNIT FOR PLUMB AND PROPER OPERATION.
- 6) FINALLY, AFTER CHECKING FOR CONSISTANT REVEALS/GAPS, SECURE FRAME PERMANENTLY WITH DOOR PANEL(S) IN PLACE.
- 7) CHECK OPERATION OF DOOR BEFORE FINAL APPLICATION OF INSIDE MOULDING.
- 8) APPLY OIL BASED PRIMER AND FINISH COATS IMMEDIATELY AFTER INSTALLATION. OVERLAP PAINT 1/16" ONTO GLASS BOTH INSIDE AND OUT. DO NOT PAINT WEATHERSTRIPPING. (WEATHERSTRIPPING IS REMOVEABLE.)

CAUTION: PRIMER IS NOT A FINISH COAT AND WILL NOT STAND UP TO WEATHER. IT IS PART OF THE PREPARATION PROCESS FOR FINISH COATING.

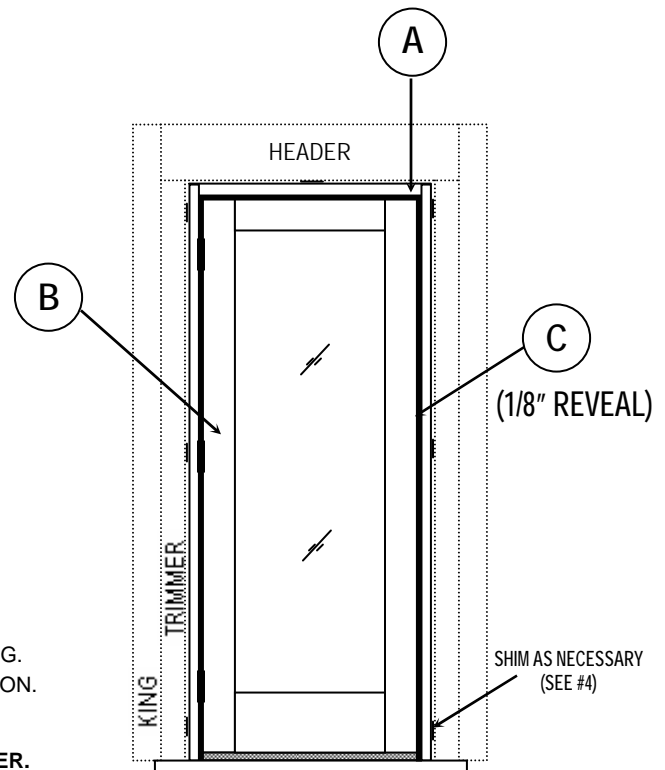

***** TO BE REMOVED BY HOMEOWNER ONLY! *****